


# Miller Mechlock Locking Cap Instructions

**Coupler attach/release instructions overleaf.**

**Please note, although not shown here, the following instructions are to be carried out once the coupler is correctly attached to the bucket. The locking cap is a safety device designed to prevent the unscrewing of the coupler once attached to the bucket.**

**IMPORTANT NOTICE:**



The locking cap should be fitted at all times when operating the coupler.

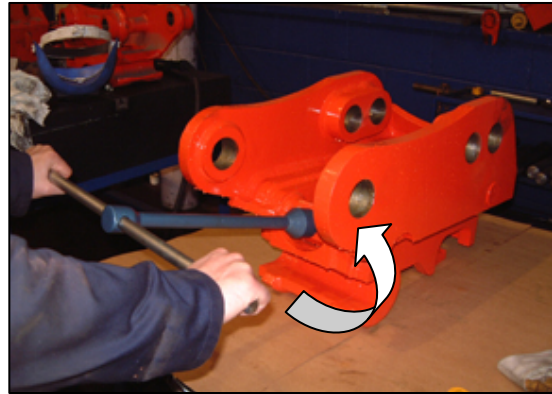

Tighten the screw by turning anticlockwise



Once the coupler is firmly clamped onto the bucket/attachment pins, fit the locking cap as shown

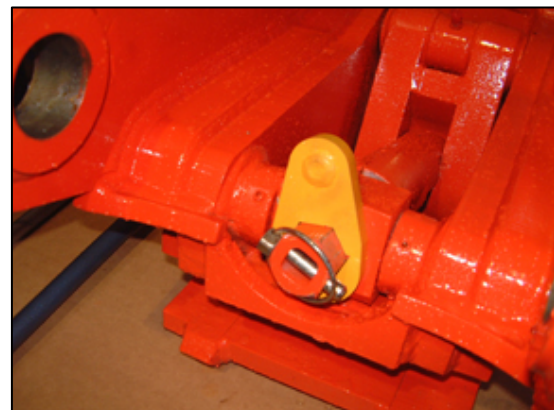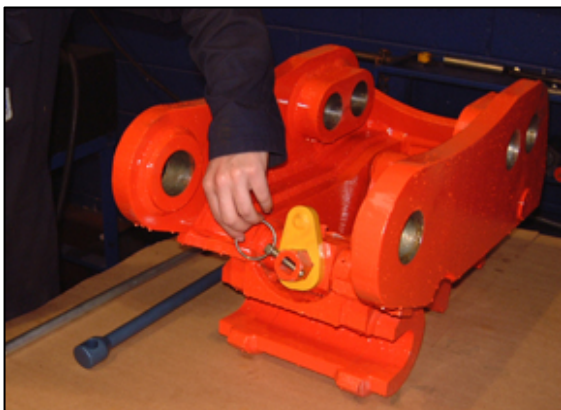

Fit the retaining pin as shown and lock clip onto nut.

## To Install the Mechlock Coupler



Use original OEM spec hardened pins to connect coupler to dipper and link.  
Use the dummy pins supplied for the bucket attachment only.

**DO NOT USE THE DUMMY PINS TO FIT COUPLER TO MACHINE**

## To Attach the Mechlock Coupler



## To Release the Mechlock Coupler

